

Remote Control Tips

To program your remote to control your TV and VCR as well as your digital set-top box, you'll need a list of manufacturers and codes. Visit the HELP section on <http://www.insightcom.com/help-cable-remotecodes.asp> for instructions and information.



These are your power buttons. Just press the button for the device you'd like to turn on or off. Or, use the **All On** button for multiple devices.

Now you can record, play, fast-forward, rewind, stop, and pause using your **ON DEMAND*** & **DVR** buttons.

These arrow buttons help you move through the program guide. You'll also use them to select a program or main menu options.

These buttons allow you to flip through your channels one by one and control your volume. Press **FAV** to set up or see all your favorite channels.

Want to get to a specific channel? Use these number buttons to get there fast.

With these buttons, you'll easily control your Picture-in-Picture and use the **SWAP** button to watch one channel while recording another if you have a Dual Tuner/DVR.

*This button not available on all remotes.

For more information on how to use your Remote Control, please refer to our Interactive Program Guide.

Please see reverse for
HD/DVR Troubleshooting.

InsightDigital 4.0